



TECHNICAL USER
MANUAL

GDK Custom Tools

Document revision: B

Copyright

Copyright © 2016 by LMI Technologies, Inc. All rights reserved.

Proprietary

This document, submitted in confidence, contains proprietary information which shall not be reproduced or transferred to other documents or disclosed to others or used for manufacturing or any other purpose without prior written permission of LMI Technologies Inc.

No part of this publication may be copied, photocopied, reproduced, transmitted, transcribed, or reduced to any electronic medium or machine readable form without prior written consent of LMI Technologies, Inc.

Trademarks and Restrictions

Gocator™ is a registered trademark of LMI Technologies, Inc. Any other company or product names mentioned herein may be trademarks of their respective owners.

Information contained within this manual is subject to change.

This product is designated for use solely as a component and as such it does not comply with the standards relating to laser products specified in U.S. FDA CFR Title 21 Part 1040.

Contact Information

LMI Technologies, Inc.
9200 Glenlyon Parkway
Burnaby BC V5J 5J8
Canada

Telephone: +1 604-636-1011

Fax: +1 604-516-8368

www.lmi3d.com

Table of Contents

Copyright	2
Table of Contents	3
Introduction	4
Tools	5
Range	5
Filter Tool	5
Surface	6
Texture	6
Sphere Fit	8
Circle Fit	10
Irregular Length	12
Common Parameters	14
Decisions	14
Filters	15
Regions	16
Software Licenses	18
Support	24
Contact	25

Introduction

This documentation describes the custom GDK tools that LMI provides.

For more information on the GDK, download the technical user manual (15201-4.x.x.xxx_MANUAL_Technical_Gocator-Measurement-Tool.pdf) by going to <http://lmi3d.com/support/downloads/>, selecting a Gocator series, and clicking on the *Product User Area* link. You can download the GDK from the same location.

Notational Conventions

This documentation uses the following notational conventions:



Consider this information in order to make best use of the product.

Tools


The following sections describe the custom GDK tools and their parameters.

Range

Filter Tool

The Filter Tool provides five filters that can be applied to range or intensity values from a Gocator displacement sensor.

The filters (selected in the **FilterType** setting) use a window size (the **FilterSize** setting) that defines the number of values to use when computing the result.

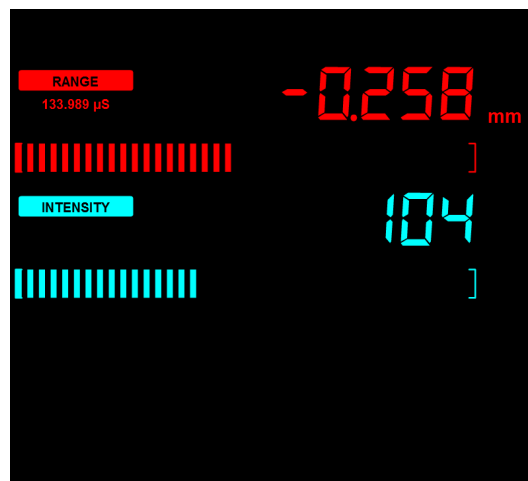A screenshot of the Filter Tool's configuration window. It has two tabs: 'Parameters' and 'Anchoring'. Under 'Parameters', there are three dropdown menus: 'Source' set to 'Top', 'FilterType' set to 'Median', and 'FilterSize' set to '9'. Below these are two checkboxes: 'Range' with a value of '-0.248' and 'Intensity' with a value of '109.000', both of which are checked. There is an 'ID' field set to '0'. At the bottom, there are two tabs: 'Parameters' and 'Output'. Under 'Parameters', there is a 'Filters' section with a 'Decision' dropdown. Below that are 'Min' and 'Max' fields, both set to '-5 mm' and '5 mm' respectively.

Filters	
Filter	Description
Average	Returns the average of the values included in the window. Recommended for smoothing out noisy values or high frequency fluctuations.
Median	Retains the value in the executing window that has the same number of values below as the number of values above. In other words, when ordering the window values from the lowest to the highest, the result will be the center value. This filter can be useful to exclude outlier or extreme values that can be acquired in a noisy environment.

Filter	Description
Low Pass	Used with low frequency signals, the filter excludes high frequencies from the final result.
High Pass	Used with high frequency signals, the high pass filter removes the low or constant portion of the signal.
Band Pass	Applies the low pass filter and then the high pass filter, to only retain the middle frequencies of the signal.



For the pass filters, the cut-off frequencies are determined by the size of the window and the acquisition speed. Tweaking is required when using these filters, as the frequencies cannot currently be set.

Measurements

Measurement

Range

Applies the filter selected in **FilterType** using the window selected in **FilterSize** to the range points in the buffer.

Intensity

Applies the filter selected in **FilterType** using the window selected in **FilterSize** to the intensity values in the buffer.

Parameters


Parameter	Description
FilterType	The type of the filter to apply. One of the following: • median • average • low pass • high pass • band pass
FilterSize	The number of range points the filter will use to calculate a value, from 1 to 15. Applies only to the current value and the previous X values. As new range points are acquired or played back, the window is moved to include the latest value acquired, and the oldest value is dropped.
Decision	See <i>Decisions</i> on page 14
Output	See <i>Filters</i> on page 15.

Surface


Texture

The Texture tool provides measurements that you can use to measure the characteristics of the scanned surface, such as roughness.

The tool performs its measurements in a user-configurable cylindrical region of interest (using inner and outer radius).

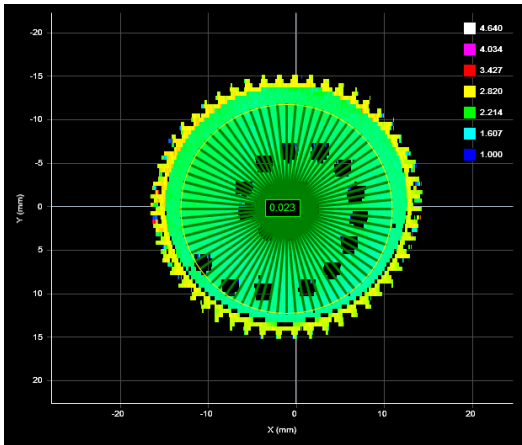

2D View

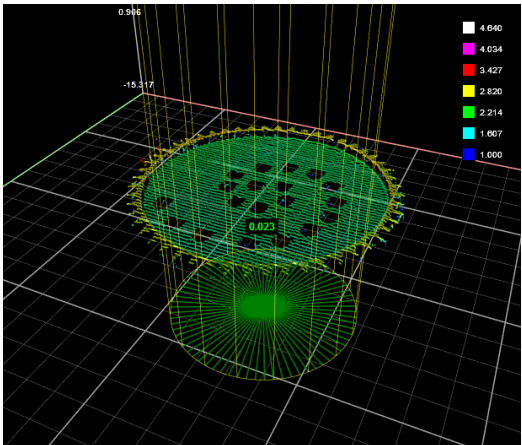

3D View

ParametersAnchoring

Source:Top

ScanTypeRadial

☐ Use Region

Outer Radius12

Inner Radius0

Path Count72

AvgAbsDiff0.023

InvalidCount

ValidCount

InvalidArea

ValidArea

ID:0

ParametersOutput

Filters



Decision

Min:0 mm

Max:0.03 mm

Measurement Panel

Measurements

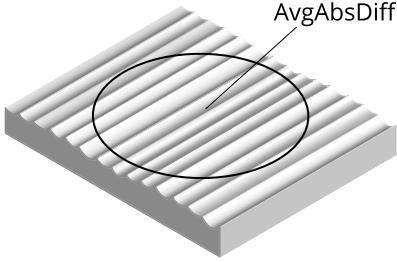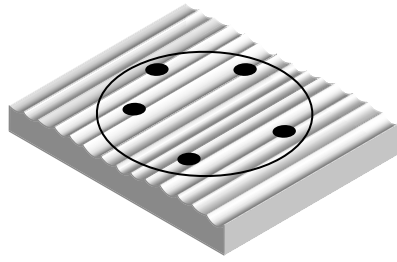
Measurement	Illustration
AvgAbsDiff Determines the average absolute difference in millimeters between all neighboring points within a cylindrical region of interest. Can be used to identify a target with an uneven surface, for example, one resulting from folded material or debris.	 A 3D perspective view of a rectangular block with a series of parallel ridges. A black circle is drawn on the top surface, centered over the ridges. A line points from the label 'AvgAbsDiff' to the circle.
InvalidCount Returns the percentage of invalid points in the cylindrical region of interest.	 A 3D perspective view of a rectangular block with a series of parallel ridges. A black circle is drawn on the top surface. Inside the circle, there are five black dots representing points. The dots are arranged with two in the center and three around the perimeter.
ValidCount Returns the percentage of valid points in the cylindrical region of interest.	
InvalidArea Returns the area of invalid points in the cylindrical region of interest.	
ValidArea Returns the area of valid points in the cylindrical region of interest.	

Parameters


Parameter	Description
ScanType	Represents the way the internal algorithm checks the values. By default, Radial . (The other values are currently reserved.)
Inner Radius	Sets the inner radius. Points inside the inner radius are ignored. Default value is 0.
Path Count	The number of outward spokes from the center of the region. The default value is 72. Decreasing this value improves speed, but will affect the precision of the results.
Decision	See <i>Decisions</i> on page 14.
Use Region	See <i>Regions</i> on page 16.
Output	See <i>Filters</i> on page 15.

Sphere Fit

The Sphere Fit tool lets you compute characteristics of a scanned sphere by specifying a region to inspect.

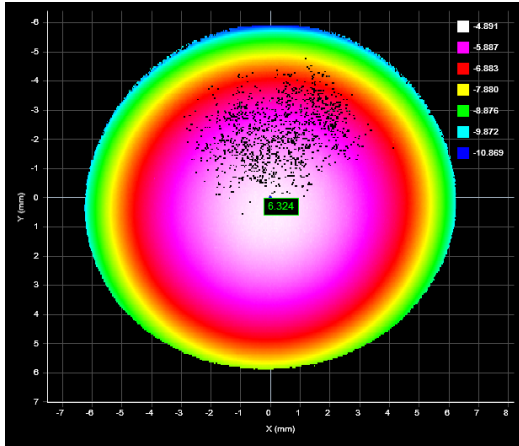

2D View

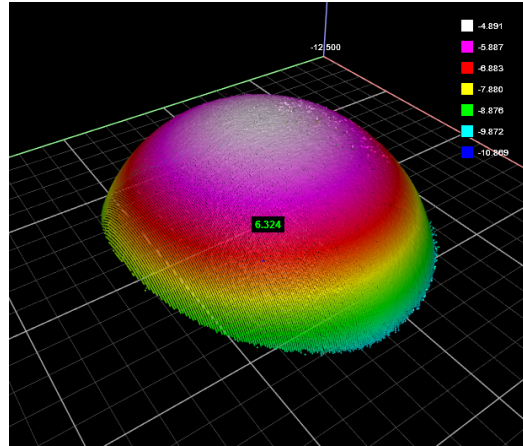

3D View

ParametersAnchoring

Source:

Top

☐ Use Region

CenterX
☐

CenterY
☐

CenterZ
☐

Radius

6.324

☒

StandardDeviation
☐

ID:

3

ParametersOutput

Filters

Decision

Min:

6.3 mm

Max:

6.4 mm

Measurement Panel

Measurements

Measurement

Illustration

Center X

Determines the X position of the center of the sphere.


Center Y

Determines the Y position of the center of the sphere.

Center Z

Determines the Z position of the center of the sphere.

X, Y, or Z

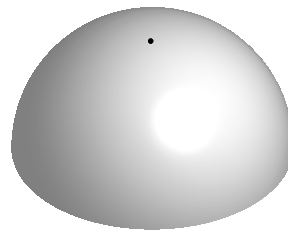


Measurement

Illustration

Radius

Determines the radius of the sphere.

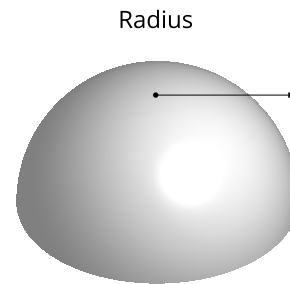

StandardDeviation

Determines the error of the points compared to the computed sphere. It is defined as the square root of the variance of the distance of every point to the computed sphere.

Parameters

Parameter

Description

Decision

See *Decisions* on page 14.

Use Region


See *Regions* on page 16.

Output


See *Filters* on page 15.

Circle Fit

The Circle Fit tool lets you compute the characteristics of a scanned circle, by specifying a region to inspect and whether to use the points closer to or farther from the region's circle. The points taken for the circle fit are extracted by parsing the region from the center, moving outward.

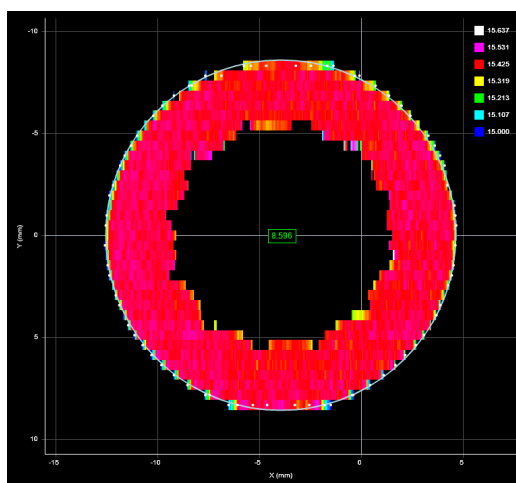

2D View

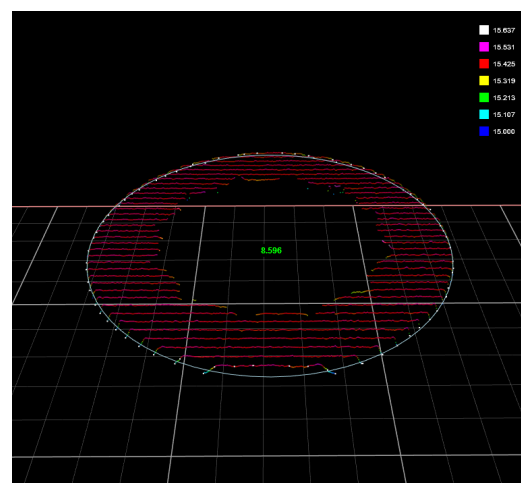

3D View

ParametersAnchoring

Source:Top
Position:Outermost
☐ Use Region

CenterX☐
CenterY☐
CenterZ☐
Radius8.596☒
StandardDeviation☐
Time☐

ID:1

ParametersOutput

Filters
Decision

Min:8.5 mm
Max:8.6 mm

Measurement Panel

Measurements

Measurement

Illustration

Center X

Determines the X position of the center of the circle.

Center Y



Determines the Y position of the center of the circle.

Center Z

Determines the Z position of the center of the circle.

Radius

Determines the radius the circle.

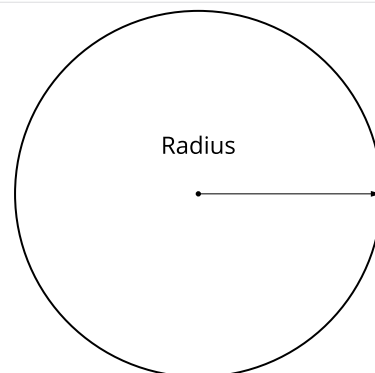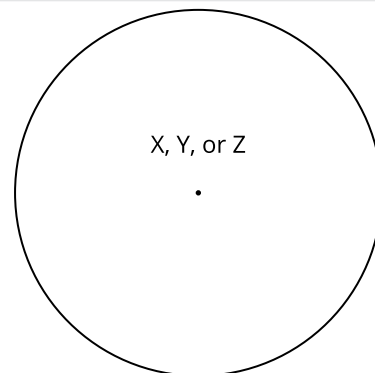


Measurement	Illustration
StandardDeviation Determines the error of the points compared to the computed circle. It is defined as the square root of the variance of the distance of every point to the computed circle.	
Time Returns the time, in milliseconds, that the tool required to process the data.	
<i>Parameters</i>	
Parameter	Description
Position	Can be one of the following: Outermost: The extracted points are selected by inspecting outward spokes starting at the center of the region. Innermost: The first encountered point is used. Otherwise, the last one is used.
Decision	See <i>Decisions</i> on page 14.
Region	See <i>Regions</i> on page 16.
Output	See <i>Filters</i> on page 15.


Irregular Length

The Irregular Length tool approximates the length or width of objects in the region of interest.

For vertical length, the tool parses the ranges for the first and last value of each row, and builds two vertical lines. The length of both lines is measured. The average length is also provided, as it is sometimes a better approximation.

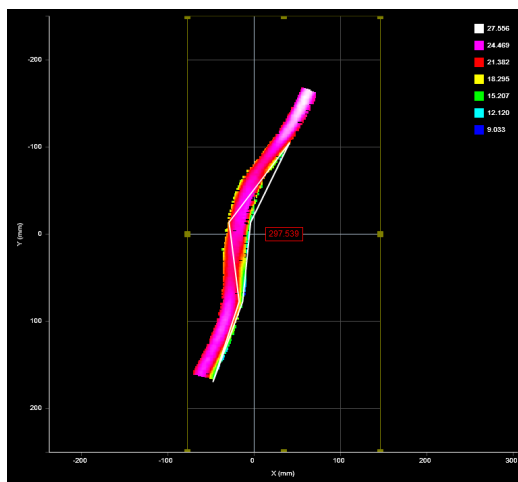

2D View

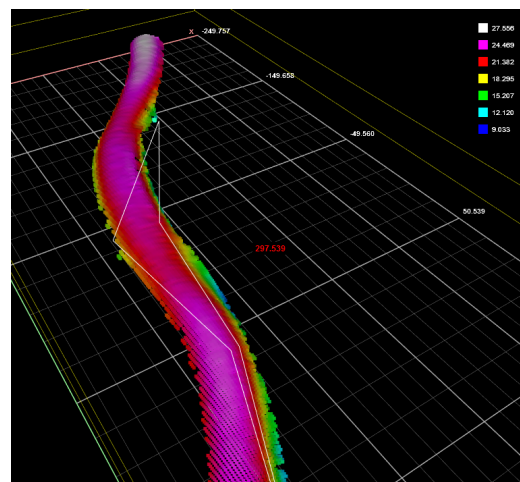

3D View

ParametersAnchoring

Source:

Top

☒ Use Region

Region

↺⋮

☒ Vertical

☒ Use Sections

Sections

3

AverageLength297.539

Length1303.698

Length2291.380

Perimeter595.078

Time0.027

ID:

0

ParametersOutput

Filters

⋮

Decision

Min:

0 mm

Max:

0 mm

Measurement Panel

Measurements

Measurement

Illustration

AverageLength

Returns the average of the Length1 and Length2 measurements.

Length1

Length2


Determines the length of one side of the scanned target.

Perimeter

Determines the full perimeter of the object scanned. The gaps between the two lines are closed, and added to the lengths of both lines.

Time

Returns the time, in milliseconds, that the tool required to process the data.

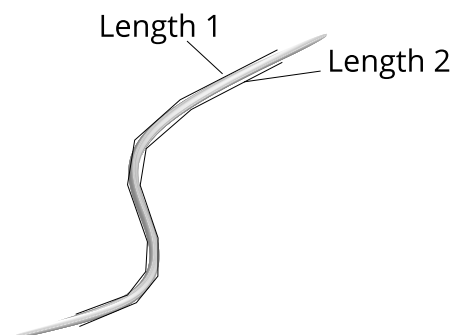

Parameters


Parameter	Description
Vertical	If checked, the vertical length is computed. Otherwise, the width is computed, by parsing the columns instead of the rows.
Use Sections	If checked, the part is divided into sections. Using this setting can speed up the process and better evaluate the lengths when the part is not smoothed. If not checked, every column/row (depending on the Vertical setting) is taken into account.
Sections	The number of sections to use (from the start to the end of the bounding box that contains the part) if Use Sections is checked.
Decision	See <i>Decisions</i> below.
Region	See <i>Regions</i> on page 16.
Output	See <i>Filters</i> on the next page.

Common Parameters


Decisions

Results from a measurement can be compared against minimum and maximum thresholds to generate *pass / fail* decisions. The decision state is *pass* if a measurement value is between the minimum and maximum threshold. In the data viewer and next to the measurement, these values are displayed in green. Otherwise, the decision state is *fail*. In the user interface, these values are displayed in red.

All measurements provide decision settings under the **Output** tab.

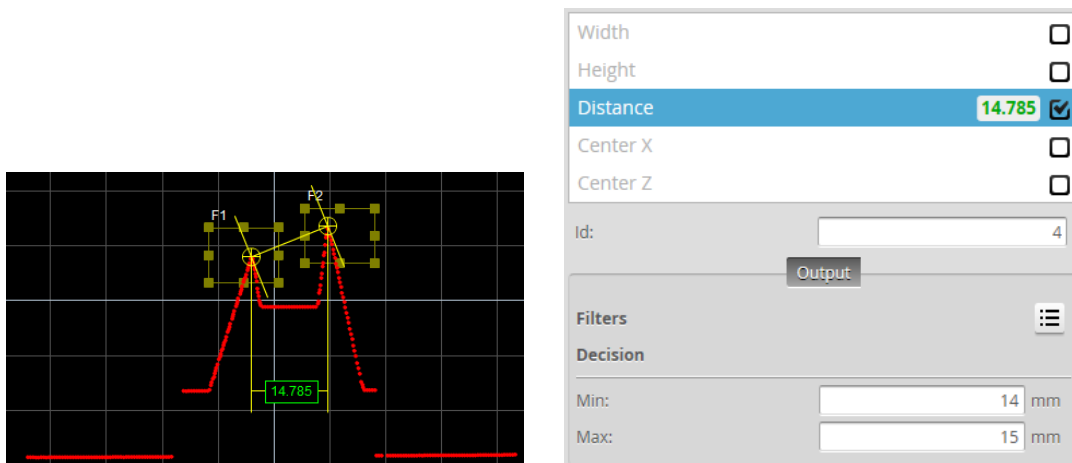

Value (14.786) within decision thresholds (Min: 14, Max: 15). Decision: Pass

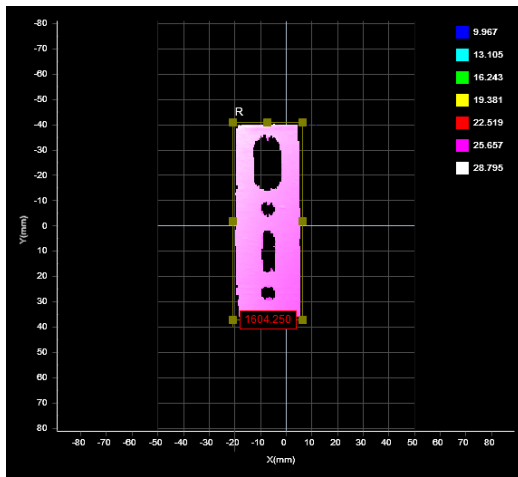

Parameter Anchoring

Source: Top

☒ Region

Volume ☐

Area **1604.250** ☒

Thickness ☐

Id: 4

Output

Filters

Decision

Min: 1500 mm²

Max: 1600 mm²

Value (1604.250) outside decision thresholds (Min: 1500, Max: 1600). Decision: Fail

Along with measurement values, decisions can be sent to external programs and devices. In particular, decisions are often used with digital outputs to trigger an external event in response to a measurement.

To configure decisions:

1. Go to the **Measure** page by clicking on the **Measure** icon.



The scan mode must be set to the type of measurement you need to configure. Otherwise, the wrong tools, or no tools, will be listed on the **Measure** page.

2. In the **Tools** panel, click on a tool in the tool list.
3. In the measurement list, select a measurement.
To select a measurement, it must be enabled.
4. Click on the **Output** tab.
For some measurements, only the **Output** tab is displayed.
5. Enter values in the **Min** and **Max** fields.

Filters

Filters can be applied to measurement values before they are output from the Gocator sensors.

Filters

Scale: 1

Offset: 0

Hold Last Valid: ☐

☒ Smoothing: 1 Samples

All measurements provide filter settings under the **Output** tab. The following settings are available.

Filter	Description
Scale and Offset	The Scale and Offset settings are applied to the measurement value according to the following formula: $\text{Scale} * \text{Value} + \text{Offset}$ Scale and Offset can be used to transform the output without the need to write a script. For example, to convert the measurement value from millimeters to thousands of an inch, set Scale to 39.37. To convert from radius to diameter, set Scale to 2.
Hold Last Valid	Holds the last valid value when the measurement is invalid. Measurement is invalid if there is no valid value.
Smoothing	Applies moving window averaging to reduce random noise in a measurement output. The averaging window is configured in number of frames. If Hold Last Valid is enabled, smoothing uses the output of the Hold Last Valid filter.

To configure the filters:

1. Go to the **Measure** page by clicking on the **Measure** icon.



The scan mode must be set to the type of measurement you need to configure. Otherwise, the wrong tools, or no tools, will be listed on the **Measure** page.

2. In the **Tools** panel, click on a tool in the tool list.
3. In the measurement list, select a measurement.
To select a measurement, it must be enabled.
4. Click on the **Output** tab.
For some measurements, only the **Output** tab is displayed.
5. Expand the **Filters** panel by clicking on the panel header or the  button.
6. Configure the filters.
Refer to the table above for a list of the filters.

Regions

Many measurement tools use region parameters to limit the area in which a measurement will occur



You can turn regions off by unchecking the checkbox next to the **Regions** setting. When you do this, the measurement tool uses the entire active area.

All tools provide region settings under the **Parameters** tab.

Region	
X:	-54.122 mm
Z:	-36.593 mm
Width:	109.67 mm
Height:	109.67 mm



The **Region** settings apply to all of a tool's measurements.

See the individual tools for any details on using this parameter with each tool.

This parameter is also referred to as a measurement region.



In 2D mode, the tool region defaults to the center of the current data view, not the global field of view. In 3D mode, the region defaults to the global field of view.

To configure regions:

1. Go to the **Measure** page by clicking on the **Measure** icon.



The scan mode must be set to the type of measurement you need to configure. Otherwise, the wrong tools, or no tools, will be listed on the **Measure** page.

2. In the **Tools** panel, click on a tool in the tool list.
3. Expand the region section by clicking on the expand button . Some region settings are found within other settings in this area.
4. Configure the region using the fields or graphically using the mouse in the data viewer.

Software Licenses

Pico-C

Website:

<http://code.google.com/p/picoc/>

License:

picoc is published under the "New BSD License".

<http://www.opensource.org/licenses/bsd-license.php>

Copyright (c) 2009-2011, Zik Saleeba

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the Zik Saleeba nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

BlowFish

Website:

<http://www.chiark.greenend.org.uk/~sgtatham/putty/licence.html>

License:

PuTTY is copyright 1997-2011 Simon Tatham.

Portions copyright Robert de Bath, Joris van Rantwijk, Delian Delchev, Andreas Schultz, Jeroen Massar, Wez Furlong, Nicolas Barry, Justin Bradford, Ben Harris, Malcolm Smith, Ahmad Khalifa, Markus Kuhn, Colin Watson, and CORE SDI S.A.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL SIMON TATHAM BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

CodeMirror

Website:

<http://codemirror.net>

License:

Copyright (C) 2011 by Marijn Haverbeke <marijnh@gmail.com>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

jQuery

Website:

<http://jquery.com/>

License:

Copyright (c) 2011 John Resig, <http://jquery.com/>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Closure Library

Website:

<http://code.google.com/closure/library/index.html>

License:

Copyright 2006 The Closure Library Authors. All Rights Reserved.

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License.

You may obtain a copy of the License at <http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS-IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

jQuery.CopyEvents

Website:

<http://brandonaaaron.net>

License:

Copyright (c) 2006 Brandon Aaron

Licensed under the MIT License (<http://www.opensource.org/licenses/mit-license.php>)

jQuery.history

License:

jQuery history plugin

Copyright (c) 2006 Taku Sano (Mikage Sawatari)

Licensed under the MIT License (<http://www.opensource.org/licenses/mit-license.php>)

Modified by Lincoln Cooper to add Safari support and only call the callback once during initialization for msie when no initial hash supplied. API rewrite by Lauris Bukis-Haberkorns

jQuery.mouseWheel

Website:

<http://brandonaaaron.net>

License:

Copyright (c) 2010 Brandon Aaron

Licensed under the MIT License (<http://www.opensource.org/licenses/mit-license.php>)

jQuery.scaling

Website:

<http://eric.garside.name>

License:

Scaling 1.0 - Scale any page element

Copyright (c) 2009 Eric Garside

Licensed under the MIT License (<http://www.opensource.org/licenses/mit-license.php>)

jQuery.scrollFollow

Website:

<http://kitchen.net-perspective.com/>

License:

Copyright (c) 2008 Net Perspective

Licensed under the MIT License (<http://www.opensource.org/licenses/mit-license.php>)

Flex SDK

Website:

<http://opensource.adobe.com/wiki/display/flexsdk/Flex+SDK>

License:

Copyright (c) 2010 Adobe Systems Incorporated

The contents of this file are subject to the Mozilla Public License Version 1.1 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at

<http://www.mozilla.org/MPL/>

Software distributed under the License is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

EtherNet/IP Communication Stack

Website:

sourceforge.net/projects/opener

License:

SOFTWARE DISTRIBUTION LICENSE FOR THE
ETHERNET/IP(TM) COMMUNICATION STACK (ADAPTED BSD STYLE LICENSE)

Copyright (c) 2009, Rockwell Automation, Inc. ALL RIGHTS RESERVED.

EtherNet/IP is a trademark of ODVA, Inc.

Support

For help with a component or product, please submit an online support ticket using LMI's [Help Desk](http://support.lmi3d.com/newticket.php) at <http://support.lmi3d.com/newticket.php>.

If you are unable to use the Help Desk or prefer to contact LMI by phone or email, use the contact information below.



Response times for phone or email support requests will take longer than requests through the Help Desk.

North America

Phone	+1 604 636 1011
Fax	+1 604 516 8368
Email	support@lmi3d.com

Europe

Phone	+31 45 850 7000
Fax	+31 45 574 2500
Email	support@lmi3d.com

For more information on safety and laser classifications, please contact:

*U.S. Food and Drug Administration
Center for Devices and Radiological Health
WO66-G609
10903 New Hampshire Avenue
Silver Spring MD 20993-0002
USA*

Contact

Americas	EMEAR	ASIA PACIFIC
LMI Technologies (Head Office) Burnaby, Canada +1 604 636 1011	LMI Technologies GmbH Berlin, Germany +49 (0)3328 9360 0	LMI (Shanghai) Trading Co., Ltd. Shanghai, China +86 21 5441 0711

LMI Technologies has sales offices and distributors worldwide. All contact information is listed at lmi3d.com/contact/locations.